


Bench Grinder Safety

General Inspection and Maintenance

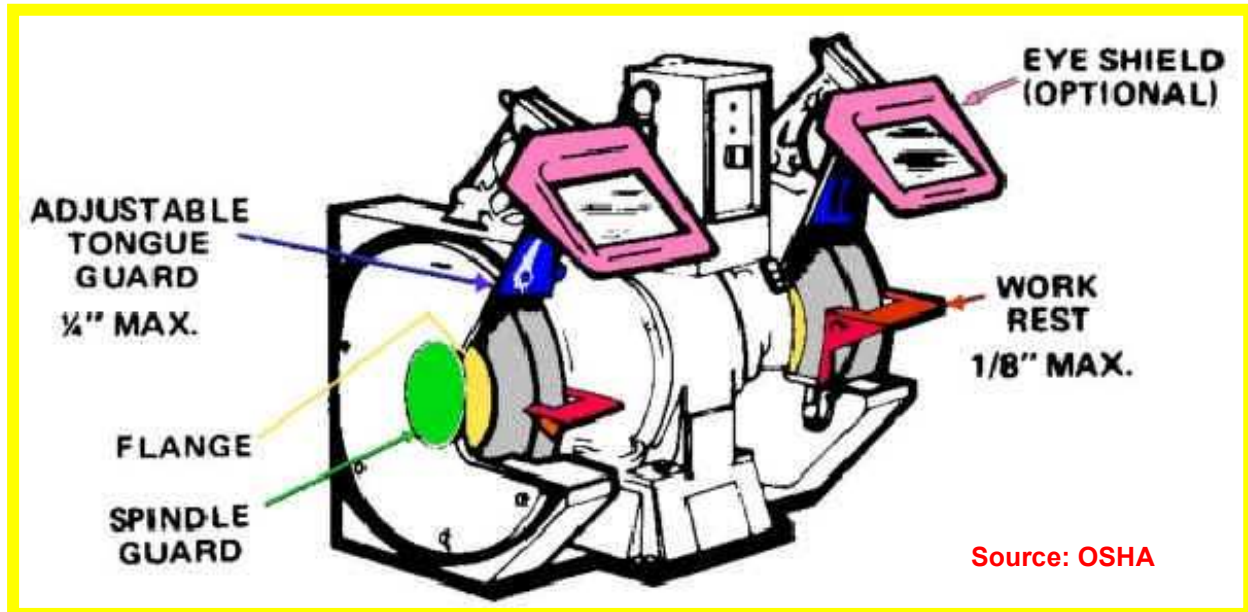

- ✓ Side guards cover the spindle, nut and flange and 75% of the wheel.
- ✓ Tongue guard within 1/4-inch of the wheel.
- ✓ Work rest maintained within 1/8-inch of the wheel.
- ✓ As the wheel wears down, readjust the tool rest and tongue guards. When you can no longer adjust them, replace the wheel.
- ✓ Grinder is permanently mounted to a work area. The work area is maintained free of clutter and accumulation of debris.